

PicoScope® 4824

High-precision PC oscilloscope



8-channel oscilloscope

With 8 high-resolution analog channels you can easily view audio, ultrasonic, vibration and power waveforms, analyze timing of complex systems, and perform a wide range of precision measurement tasks on multiple inputs at the same time. Although the scope has the same small footprint as Pico's existing 2- and 4-channel models, the BNC connectors with 20 mm spacing still accept all common probes and accessories.

Despite its compact size, there is no compromise on performance. With a high vertical resolution of 12 bits, 20 MHz bandwidth, 256 MS buffer memory, and a fast sampling rate of 80 MS/s, the PicoScope 4824 has the power and functionality to deliver accurate results. Deep memory allows it to analyze multiple serial buses such as UART, I²C, SPI, CAN and LIN plus control and driver signals.

Applications

Power supply start sequencing
7-channel audio systems
Multi-sensor systems
Multi-phase drives and controls
General-purpose and precision testing
Complex embedded system development






Arbitrary waveform and function generators

In addition, the PicoScope 4824 has a built-in low-distortion, 80 MS/s, 14-bit arbitrary waveform generator (AWG), which can be used to emulate missing sensor signals during product development, or to stress-test a design over the full intended operating range. Waveforms can be imported from data files or created and modified using the built-in graphical AWG editor.

A function generator is also included, with sine, square, and triangle waves up to 1 MHz, along with DC level, white noise, and many more standard waveforms. As well as level, offset and frequency controls, advanced options allow you to sweep over a range of frequencies. Combined with the spectrum peak hold option, this creates a powerful tool for testing amplifier and filter responses.

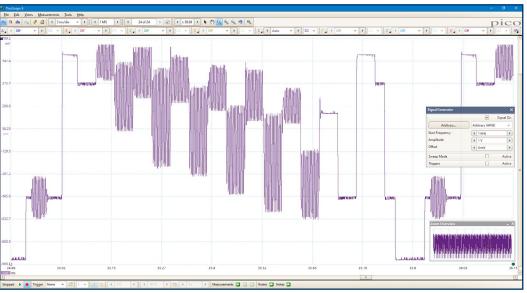


Applications

Power measurements

The PicoScope 4824 is ideal for making a range of power measurements on high voltages and currents and low-voltage control signals. For the best results, use a Pico differential voltage probe (TA041 or TA057) in combination with a current clamp (TA167). To improve the efficiency and reliability of power designs, the scope can display and analyze standby power dissipation, inrush current, and steady-state power consumption. PicoScope's built-in measurements and statistics of parameters such as true RMS, frequency, peak-to-peak voltage and THD allow accurate analysis of power quality.

Nonlinear loads and modern power-conversion equipment produce complex waveforms with significant harmonic content. These harmonics reduce efficiency by causing increased heating in equipment and conductors, misfiring in variable speed drives, and torque pulsations in motors. The 12-bit PicoScope 4824 has the precision to measure distortion typically up to the 100th harmonic. On the supply side, power quality issues such as sags and dips, swells and spikes, flicker, interruptions and long-term voltage and frequency variations can also be checked for regulatory compliance.

In a 3-phase distribution system, it is important to characterize and balance loads across phases. With 8 channels the PicoScope 4824 can monitor waveforms of current and voltage on all 4 conductors of a 3-phase-plus-neutral system. This helps to identify mismatches that can cause breaker tripping, or transformer and conductor overheating.

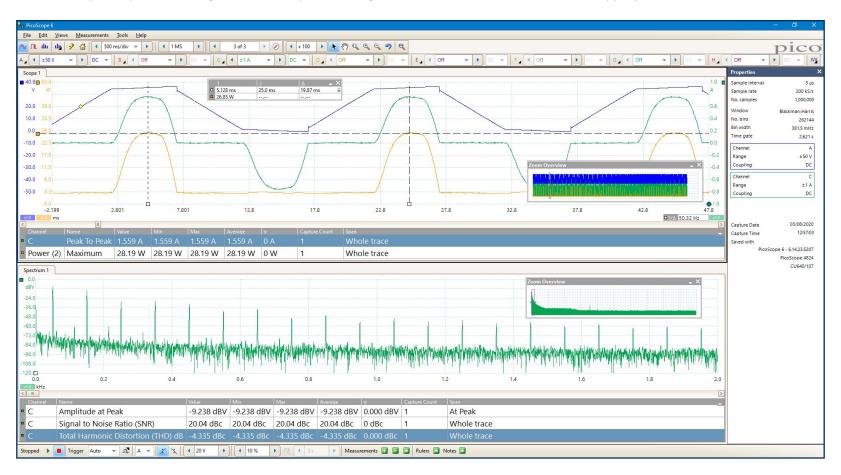

DeepMeasure

One waveform, millions of measurements.


Measurement of waveform pulses and cycles is key to verification of the performance of electrical and electronic devices. DeepMeasure delivers automatic measurements of important waveform parameters, such as pulse width, rise time and voltage. Up to a million cycles can be displayed with each triggered acquisition. Results can be easily sorted, analyzed and correlated with the waveform display.

Complex embedded systems

When debugging an embedded system with a scope, you can quickly run out of channels. You may need to look at an I²C or SPI bus at the same time as multiple power rails, DAC outputs and logic signals. With eight channels, the PicoScope 4824 can cope with all of this. Choose whether to decode up to eight serial buses, with analog waveforms and decoded data both visible, or a combination of serial buses and other analog or digital signals. PicoScope provides advanced triggering on all channels, so you can search for runt pulses, dropouts and noise as well as looking for data patterns using the 4-input Boolean logic trigger.

Split-screen display

The PicoScope 6 software can display up to 16 scope and spectrum views at once, making comparisons and analysis even clearer. The split-screen display can be customized to show whichever combination of waveforms you need, to display multiple channels or different variants of the same signal. Additionally, each waveform shown works with individual zoom, pan, and filter settings for ultimate flexibility. This flexibility, alongside the facility to use monitors many times larger than a fixed scope display, are further benefits to choosing a USB oscilloscope over a traditional benchtop model.

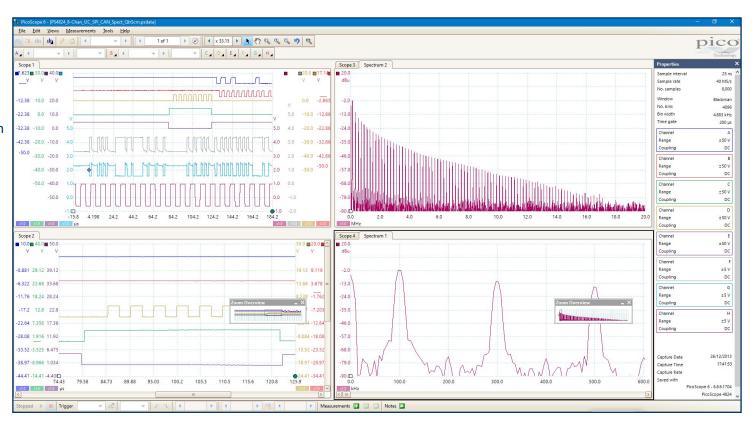


PicoScope performance and reliability

With over 25 years' experience in the test and measurement industry, we know what's important in an oscilloscope. The PicoScope 4824 delivers value for money by including a wide range of high-end features as standard. The PicoScope 6 software includes serial decoding and mask limit testing, and new functionality is regularly delivered through free upgrades to ensure that your device does not quickly become outdated. All Pico Technology devices are optimized with the help of feedback from our customers.


Zoom in and capture every last detail

The PicoScope zoom function lets you take a closer look at the fine detail on your signals. Using simple point-and-click tools you can quickly zoom in on both axes and reveal every last detail of the signal, whilst the undo zoom function lets you return to the previous view.

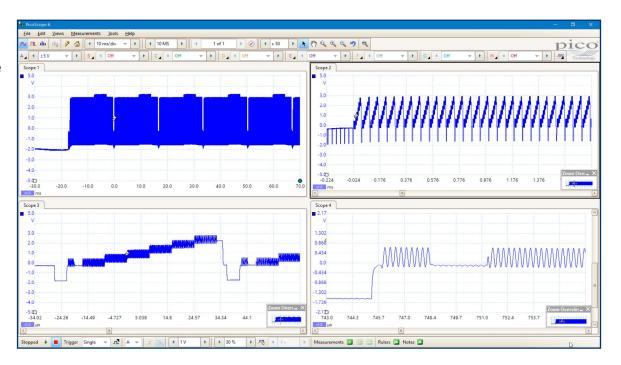

Color persistence modes


Advanced display modes allow you to see old and new data superimposed, with new data in a brighter color or shade. This makes it easy to see glitches and dropouts and to estimate their relative frequency. Choose between analog persistence, digital color, or custom display modes.

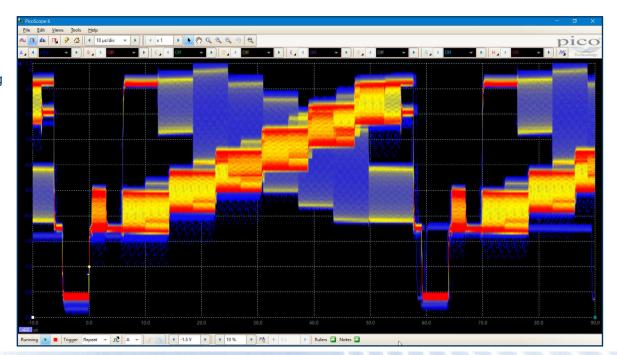

Math channels

With PicoScope 6 you can perform a variety of mathematical calculations on your input signals and reference waveforms.


Use the built-in list for simple functions such as addition and inversion, or open the equation editor and create complex functions involving trigonometry, exponentials, logarithms, statistics, integrals and derivatives, filters, averaging and peak-detection.

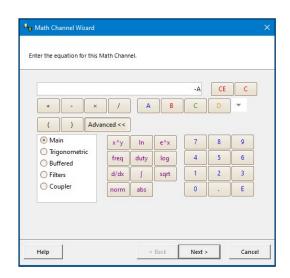

Spectrum analyzer

With the click of a button, you can open a new window to display a spectrum plot of selected channels up to the full bandwidth of the oscilloscope. A comprehensive range of settings gives you control over the number of spectrum bands, window types and display modes.


A comprehensive set of automatic frequency-domain measurements can be added to the display, including THD, THD+N, SINAD, SNR, SFDR and IMD. You can even use the AWG and spectrum mode together to perform swept scalar network analysis.

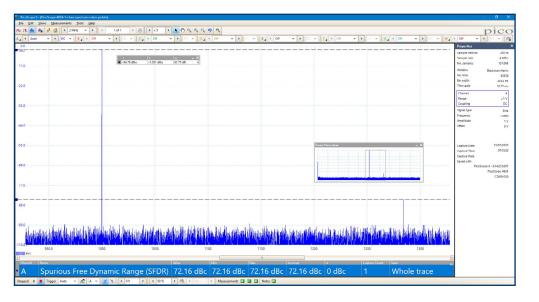

Automatic measurements


PicoScope allows you to display a table of automated measurements for troubleshooting and analysis: 15 scope and 11 spectrum mode measurements are available.

Using the built-in measurement statistics you can see the average, standard deviation, maximum and minimum of each measurement as well as the live value. You can add as many measurements as you need on each view. Each measurement includes statistical parameters showing its variability. For information on the measurements available in scope and spectrum modes, see Automatic Measurements in the Specifications table.

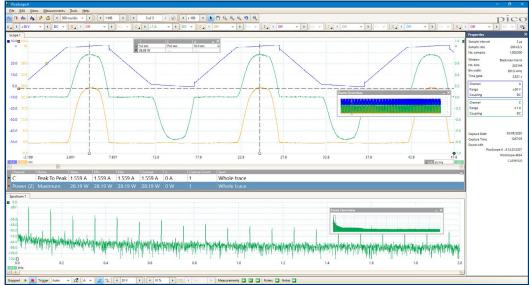

Scope mode measurements

Spectrum mode measurements

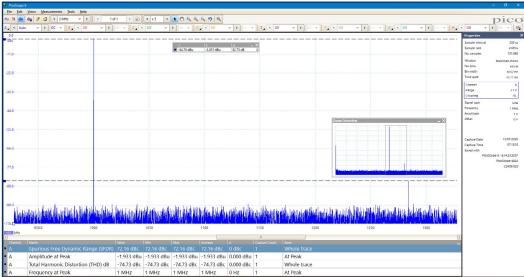


Serial decoding

The PicoScope 4824 includes serial decoding capability across all 8 channels as standard. PicoScope software can decode 1-Wire, ARINC 429, CAN, CAN FD, DALI, DCC, DMX512, Ethernet 10Base-T, FlexRay, I²C, I²S, LIN, Manchester, Modbus ASCII, Modbus RTU, PS/2, SENT, SPI, UART, and USB 1.1 protocol data as standard, with more protocols in development and available in the future with free-of-charge software upgrades.

The decoded data can be displayed in the format of your choice: in graph, in table, or both at once.


- **Graph** format shows the decoded data beneath the waveform on a common time axis, with error frames marked in red. These frames can be zoomed to investigate noise or distortion.
- **Table** format shows a list of the decoded frames, including the data and all flags and identifiers. You can set up filtering conditions to display only the frames you are interested in, search for frames with specified properties, or define a start pattern to signal when the program should list the data.

PicoScope can also import a spreadsheet to decode the hexadecimal data into user-defined text strings.

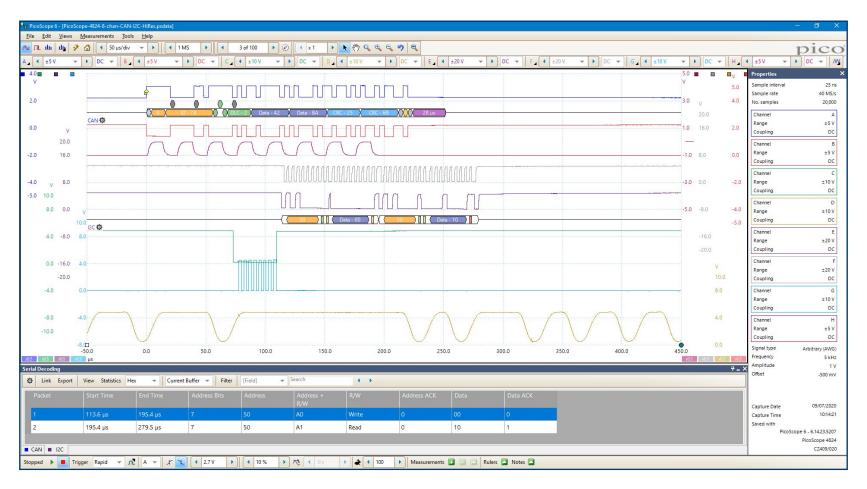

High signal integrity

Careful front-end design and shielding reduces noise, crosstalk and harmonic distortion, meaning we are proud to publish the specifications for our scopes in detail. Decades of oscilloscope design experience can be seen in both improved pulse response and bandwidth flatness, and low distortion. The scope features 12 input ranges from ± 10 mV to ± 50 V full scale and a huge spurious free dynamic range of up to 70 dB. The result is simple: when you probe a circuit, you can trust in the waveform you see on the screen.

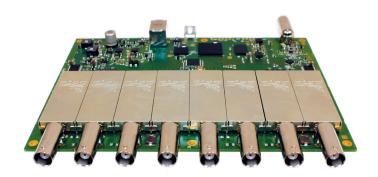

High-end features as standard

Buying a PicoScope is not like making a purchase from other oscilloscope companies, where optional extras considerably increase the price. With our scopes, high-end features such as resolution enhancement, mask limit testing, serial decoding, advanced triggering, automatic measurements, math channels, XY mode, segmented memory, and a signal generator are all included in the price.

To protect your investment, both the PC software and firmware inside the scope can be updated. Pico Technology has a long history of providing new features for free through software downloads. We deliver on our promises of future enhancements year after year, unlike many other companies in the field. Users of our products reward us by becoming lifelong customers and frequently recommending us to their colleagues.

USB connectivity

The SuperSpeed USB 3.0 connection not only allows high-speed data acquisition and transfer, but also makes printing, copying, saving, and emailing your data from the field quick and easy. USB powering removes the need to carry around a bulky external power supply, making the kit even more portable for the engineer on the move.




Digital triggering

Most digital oscilloscopes still use an analog trigger architecture based on comparators. This can cause time and amplitude errors that cannot always be calibrated out. The use of comparators often limits the trigger sensitivity at high bandwidths and can also create a long trigger rearm delay.

In 1991 Pico set an innovation milestone by pioneering the use of full digital triggering using the actual digitized data. This reduces trigger errors and allows our oscilloscopes to trigger on the smallest signals, even at the full bandwidth. All real-time triggering is digital, resulting in high threshold resolution with programmable hysteresis and optimal waveform stability.

The reduced rearm delay provided by digital triggering, together with segmented memory, allows the capture of events that happen in rapid sequence. At the fastest timebase, rapid triggering can capture a new waveform every 3 microseconds until the buffer is full.

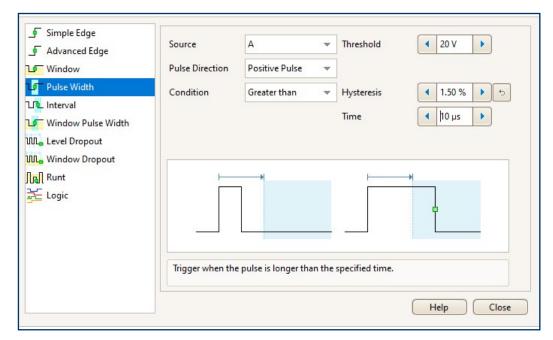


Advanced triggers


As well as the standard range of triggers found on most oscilloscopes, the PicoScope 4824 has a comprehensive set of advanced triggers built in to help you capture the data you need. These include pulse width, windowed, and dropout triggers to help you find and capture your signal quickly.

Mask limit testing

PicoScope allows you to draw a mask around any signal with user-defined tolerances. This has been designed specifically for production and debugging environments, enabling you to compare signals. Simply capture a known good signal, draw a mask around it, and then attach the system under test. PicoScope will capture any intermittent glitches and can show a failure count and other statistics in the **Measurements** window.


The numerical and graphical mask editors can be used separately or in combination, allowing you to enter accurate mask specifications, modify existing masks, and import and export masks as files.

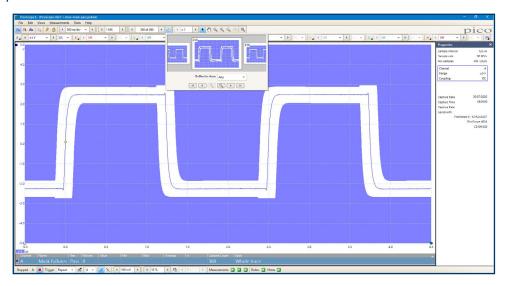

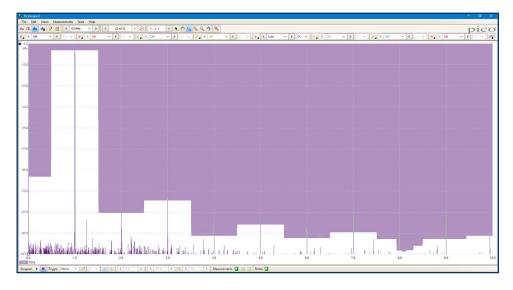


Alarms

PicoScope can be programmed to execute actions when certain events occur. The events that can trigger an alarm include mask limit fails, trigger events and buffers full. The actions that PicoScope can execute include saving a file, playing a sound, executing a program and triggering the signal generator or the AWG. Alarms, coupled with mask limit testing, help create a powerful and time-saving waveform monitoring tool. Capture a known good signal, auto-generate a mask around it and then use the alarms to automatically save any waveform (complete with a time/date stamp) that does not meet specification.

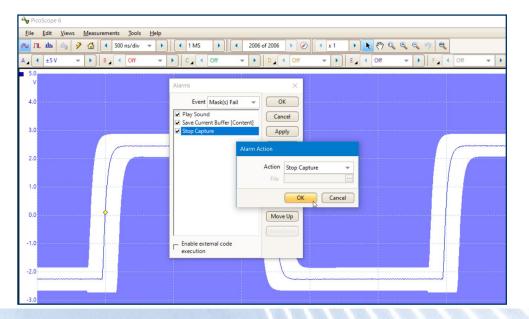


Digital low-pass filtering

Each input channel has its own digital low-pass filter with independently adjustable cutoff frequency from 1 Hz to the full bandwidth of the scope. This enables you to reject noise on selected channels while viewing high-bandwidth signals on the others.

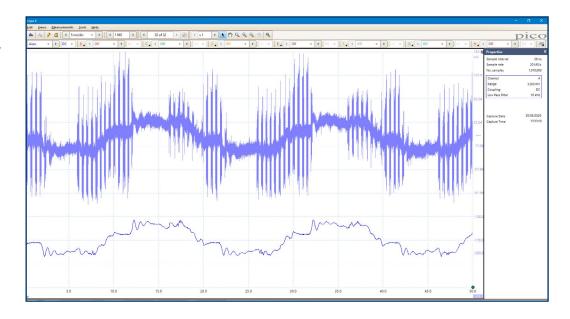

Custom probe settings

The custom probes menu allows you to correct for gain, attenuation, offsets and nonlinearities of probes and transducers, or convert to different measurement units. Definitions for standard Pico-supplied probes are built in, and you can also create your own using linear scaling or even an interpolated data table, and save them to disk for later use.

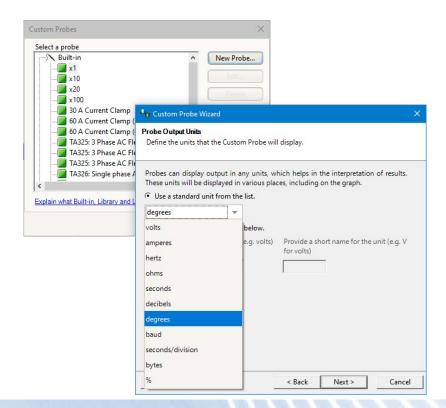

PicoScope 6 software Tools: Including **Trigger Waveform replay tools:** Zoom and pan tools: Rulers: Fach axis has two rulers that can be dragged across serial decoding, marker: Drag PicoScope 6 automatically PicoScope 6 allows a zoom The display can be as simple or as reference channels, records up to 10 000 of the the yellow factor of several million. the screen to make quick advanced as you need. Begin with macro recorder. diamond to most recent waveforms. which is necessary when measurements of amplitude, a single view of one channel, and alarms, mask limit working with the deep time and frequency. adjust trigger You can quickly scan then expand the display to include testing and math level and prethrough to look for memory of the PicoScope any number of live channels, math channels. trigger time. intermittent events, or use 4824 oscilloscope. channels and reference waveforms. the Buffer Navigator to Signal generator: search visually. Generates standard signals or arbitrary Auto setup button: waveforms. Configures the collection Includes frequency time and voltage range for 🔼 л шоды 🔰 🚮 🚺 50 µs/div 🔻 🕨 🚺 1 МS sweep mode. 4 3 of 100 → Ø 4 x 12.52 → k 🖑 Q € € 🦻 € pico clear display of signals. C + | C, (±10V +) | DC + | D, (±10V +) | DC + | E, (±20V +) | DC + | E, (±20V → DC → B 4 ±5V ▼ ▶ DC ▼ H ±5V Scope 1 **Properties sheet:** No. samples **Channel options:** Blackman Shows a summary Filtering, offset, resolution 1.221 kHz of the settings that enhancement, custom PicoScope is using. -4.0 -5.0 probes and more. 8.0 0.0 Coupling Ruler legend: 38.33 µs O-Oscilloscope controls: Absolute and Controls such as voltage differential ruler +10 V range, scope resolution, measurements are 450.0 0.0 01/A 26.09 kHz ×0.5 ×0.5 ×0.5 channel enable, timebase listed here. x0.5 x0.5 x0.5 µs ±20 V and memory depth. Views: PicoScope 6 is carefully Movable axes: The designed to make vertical axes can be the best use of scaled and dragged up the display area. or down. This feature Amplitude You can add new is particularly useful At Peak scope, spectrum when one waveform Signal to Noise Ratio (SNR) 464E-3 dBc 464E-3 dBc 464E-3 dBc 0 dBc Whole trace and XY views 09/07/2020 is obscuring another. Total Harmonic Distortion (THD) % 73.49 % 73.49 % 73.49 % • 73.49 % 0.000 % Whole trace with automatic or There's also an Auto Stopped ▶ ■ Trigger Repeat ▼ 📭 A ▼ 🗶 🐧 2.7V ▶ 📢 10% ▶ 🎮 🔻 0.5 Measurements 🖫 📮 🔼 Notes 🔼 custom layouts. Arrange Axes command.

Trigger toolbar: Quick access to main controls, with advanced triggers in a pop-up window.

Automatic measurements: Display calculated measurements for troubleshooting and analysis. You can add as many measurements as you need on each view. Each measurement includes statistical parameters showing its variability.


Zoom overview: Click and drag for quick navigation in zoomed views.

PicoSDK - write your own apps

Our free software development kit, PicoSDK, allows you to write your own software and includes drivers for Windows, macOS and Linux. Example code supplied on our <u>GitHub organization page</u> shows how to interface to third-party software packages such as National Instruments LabVIEW and MathWorks MATLAB.

PicoSDK supports data streaming, a mode that captures gap-free continuous data over USB 3.0 direct to the PC's RAM or hard disk, at a rate of up to 80 MS/s on one channel (up to 160 MS/s split between multiple channels), so you are not limited by the size of the scope's buffer memory. Sampling rates in streaming mode are subject to PC specifications and application loading.

There is also an active community of PicoScope users who share both code and whole applications on our <u>Test and Measurement Forum</u> and the <u>PicoApps</u> section of the website. The Frequency Response Analyzer shown here is a popular application on the forum.

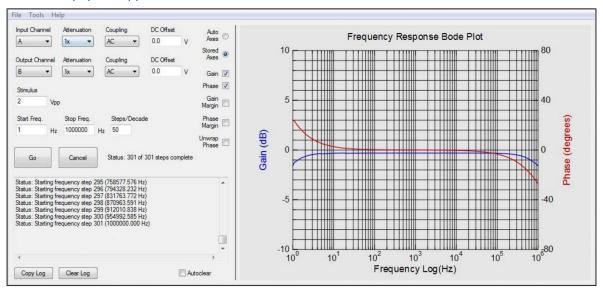

```
ScopeSettingsPropTree.clear();
   wstring appVersionStringW = wstring_convert<codecvt_utf8<wchar_t>>().from_bytes(appVersionString);
   ScopeSettingsPropTree.put( L"appVersion", appVersionStringW );
   ScopeSettingsPropTree.put( L"picoScope.inputChannel.name", L"A" );
   ScopeSettingsPropTree.put( L"picoScope.inputChannel.attenuation", ATTEN_1X );
   ScopeSettingsPropTree.put( L"picoScope.inputChannel.coupling", PS_AC );
   ScopeSettingsPropTree.put( L"picoScope.inputChannel.dcOffset", L"0.0" );
   ScopeSettingsPropTree.put( L"picoScope.inputChannel.startingRange", -1 ); // Base on stimulus
   ScopeSettingsPropTree.put( L"picoScope.outputChannel.name", L"B" );
   ScopeSettingsPropTree.put( L"picoScope.outputChannel.attenuation", ATTEN_1X );
   ScopeSettingsPropTree.put( L"picoScope.outputChannel.coupling", PS_AC );
   ScopeSettingsPropTree.put( L"picoScope.outputChannel.dcOffset", L"0.0" );
   ScopeSettingsPropTree.put( L"picoScope.outputChannel.startingRange", pScope->GetMinRange(PS_AC) );
   midSigGenVpp = floor((pScope->GetMinFuncGenVpp() + pScope->GetMaxFuncGenVpp()) / 2.0):
   stimulusVppSS << fixed << setprecision(1) << midSigGenVpp;
   maxStimulusVppSS << fixed << setprecision(1) << pScope->GetMaxFuncGenVpp();
   startFreqSS << fixed << setprecision(1) << (max(1.0, pScope->GetMinFuncGenFreq())); // Make frequency at least 1.0 since 0.0 (DC) makes no sense for FRA
   stopFreqSS << fixed << setprecision(1) << (pScope->GetMaxFuncGenFreq());
```


PicoLog 6 software

PicoScope oscilloscopes are also supported by the PicoLog 6 data logging software, allowing you to view and record signals on multiple units in one capture.

PicoLog 6 allows sample rates of up to 1 kS/s per channel, and is ideal for long-term observation of general parameters, such as voltage or current levels, on several channels at the same time, whereas the PicoScope 6 software is more suitable for waveshape or harmonic analysis.

You can also use PicoLog 6 to view data from your oscilloscope alongside a data logger or other device. For example, you could measure voltage and current with your PicoScope and plot both against temperature using a TC-08 thermocouple data logger, or humidity with a DrDAQ multipurpose data logger.

PicoLog 6 is available for Windows, macOS, Linux and Raspberry Pi OS.

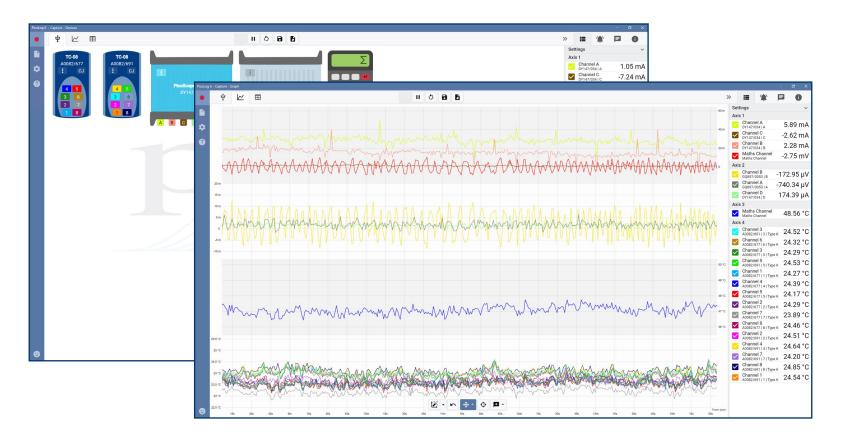

Specifications

Specifications				
Vertical				
Input channels	8			
Connector type	BNC			
Bandwidth (-3 dB)	20 MHz (50 mV to 50 V ranges) 10 MHz (10 mV and 20 mV ranges)			
Rise time (calculated)	17.5 ns (50 mV to 50 V ranges) 35.0 ns (10 mV and 20 mV ranges)			
Vertical resolution	12 bits			
Software-enhanced vertical resolution	16 bits			
Input type	Single-ended			
Input ranges	±10 mV to ±50 V full scale, in 12 ranges			
Input sensitivity	2 mV/div to 10 V/div (10 vertical divisions)			
Input coupling	AC / DC			
Maximum input voltage	±50 V DC / 42.4 V pk max AC			
Input characteristics	1 MΩ 19 pF			
DC accuracy	\pm (1% of full scale + 300 μ V)			
Analog offset range (vertical position adjustment)	±250 mV (10 mV to 500 mV ranges) ±2.5 V (1 V to 5 V ranges) ±25 V (10 V to 50 V ranges)			
Analog offset control accuracy	±1% of offset setting additional to basic DC accuracy			
Overvoltage protection	±100 V (DC + AC peak)			
Horizontal timebase				
Maximum sampling rate (real-time)	80 MS/s (1 to 4 channels in use) 40 MS/s (5 to 8 channels in use)			
Maximum sampling rate (USB 3.0 streaming)	20 MS/s using PicoScope 6 software, shared between channels 80 MS/s max. for a single channel using PicoSDK. 160 MS/s total across all channels. (PC-dependent)			
Timebase ranges (real time)	20 ns/div to 5000 s/div			
Buffer memory (shared between active channels)	256 MS			
Buffer memory (streaming mode)	100 MS in PicoScope software. Up to available PC memory when using PicoSDK			
Waveform buffer	10 000 segments (rapid block mode) 10 000 waveforms (PicoScope 6 circular buffer)			
Timebase accuracy	±20 ppm (+5 ppm/year)			
Sampling jitter	25 ps RMS typical			


Dynamic performance (typical)					
Crosstalk (full bandwidth)	-76 dB				
Harmonic distortion	< -60 dB, 10 mV range				
Harmonic distortion	< -70 dB, 20 mV and higher ranges				
SFDR	> 60 dB, 20 mV and 10 mV ranges				
3FDR	> 70 dB, 50 mV and higher ranges				
Noise	45 μV RMS on 10 mV range				
Pulse response	< 1% overshoot				
Bandwidth flatness	DC to full bandwidth (+0.2 dB, -3 dB)				
Triggering					
Source	Channels A to H				
Trigger modes	None, auto, repeat, single, rapid (segmented memory)				
Trigger types	Rising or falling edge				
Advanced trigger types	Simple Edge, Advanced Edge, Window, Pulse Width, Interval, Window Pulse Width, Level Dropout, Window Dropout, Runt				
Trigger sensitivity	Digital triggering provides 1 LSB accuracy up to full bandwidth				
Pre-trigger capture	Up to 100% of capture size				
Post-trigger delay	Zero to 4 billion samples (settable in 1 sample steps)				
Trigger rearm time	< 3 µs on fastest timebase				
Maximum trigger rate	Up to 10 000 waveforms in a 30 ms burst				
Advanced digital trigger levels	All trigger levels, window levels and hysteresis values settable with 1 LSB resolution across input range				
Advanced digital trigger time intervals	All time intervals settable with 1 sample resolution from 1 sample (minimum 12.5 ns) up to 4 billion sample intervals				
Function generator					
Standard output signals	Sine, square, triangle, DC voltage, ramp up, ramp down, sinc, Gaussian, half-sine.				
	White noise, selectable amplitude and offset within output voltage range				
Pseudorandom output signals	Pseudorandom binary sequence (PRBS), selectable high and low levels within output voltage range, selectable bit rate up to				
	1 Mb/s				
Standard signal frequency	0.03 Hz to 1 MHz				
Output frequency accuracy	±20 ppm				
Output frequency resolution	< 0.02 Hz				
Sweep modes	Up, down, dual with selectable start/stop frequencies and increments				
Triggering	You can trigger a counted number of waveform cycles or sweeps (from 1 to 1 billion) from the scope trigger or manually from				
	software.				
Output voltage range	±2 V				
Output voltage adjustment	Signal amplitude and offset are adjustable in approximately 300 μV steps, within an overall ±2 V range.				
DC accuracy	±1% of full scale				
Amplitude flatness	< 0.5 dB to 1 MHz, typical				
SFDR	87 dB typical				
Output resistance	600 Ω				
Connector type	Rear-panel BNC				
Overvoltage protection	±10 V				

Arbitrary waveform generator				
Update rate	80 MS/s			
Buffer size	16 k samples			
Vertical resolution	14 bits (output step size approximately 300 μV)			
Bandwidth	1 MHz			
Rise time (10% to 90%)	150 ns			
	esolution, voltage range and accuracy and output characteristics as for function generator.			
Spectrum analyzer				
Frequency range	DC to 20 MHz			
Display modes	Magnitude, average, peak hold			
Y axis	Logarithmic (dbV, dBu, dBm, arbitrary dB) or linear (volts)			
X axis	Linear or logarithmic			
Windowing functions	Rectangular, Gaussian, triangular, Blackman, Blackman-Harris, Hamming, Hann, flat-top			
Number of FFT points	Selectable from 128 to 1 million in powers of 2			
Math channels				
Functions	-x, x+y, x-y, x*y, x/y, x^y, sqrt, exp, ln, log, abs, norm, sign, sin, cos, tan, arcsin, arccos, arctan, sinh, cosh, tanh, delay, average, frequency, derivative, integral, min, max, peak, duty, highpass, lowpass, bandpass, bandstop			
Operands	A to H (input channels), T (time), reference waveforms, pi, constants			
Automatic measurements				
Scope mode	AC RMS, cycle time, DC average, duty cycle, edge count, fall time, falling edge count, falling rate, frequency, high pulse width, low pulse width, maximum, minimum, negative duty cycle, peak-to-peak, rise time, rising edge count, rising rate, true RMS			
Spectrum mode	Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD+N, SFDR, SINAD, SNR, IMD			
Statistics	Minimum, maximum, average, standard deviation			
DeepMeasure™				
Parameters	Cycle number, cycle time, frequency, low pulse width, high pulse width, duty cycle (high), duty cycle (low), rise time, fall time, undershoot, overshoot, max. voltage, min. voltage, voltage peak to peak, start time, end time			
Serial decoding				
Protocols	1-Wire, ARINC 429, CAN, CAN FD, DALI, DCC, DMX512, Ethernet 10Base-T, FlexRay, I ² C, I ² S, LIN, Manchester, Modbus ASCII, Modbus RTU, PS/2, SENT, SPI, UART, USB 1.1			
Mask limit testing				
Statistics	Pass/fail, failure count, total count			
Mask creation	User-drawn, table entry, auto-generated from waveform or imported from file			
Display				
Interpolation	Linear or sin(x)/x			
Persistence modes	Digital color, analog intensity, custom, fast			
Output				
File formats	bmp, csv, gif, animated gif, jpg, mat, pdf, png, psdata, pssettings, txt			
Functions	Save, copy to clipboard, print			

General					
PC connectivity	USB 3.0 SuperSpeed				
PC connectivity	USB 2.0 Hi-Speed compatible				
PC connector type	USB 3.0 type B				
PC requirements	Processor, memory and disk space: as required by the operating system				
<u> </u>	Ports: USB 3.0 (recommended) or 2.0 (compatible)				
Power requirements	Powered from USB				
Ground terminal	M4 screw terminal, rear panel.				
Dimensions	190 x 170 x 40 mm (including connectors)				
Weight	0.55 kg				
Temperature range	Operating: 0 °C to 45 °C (20 °C to 30 °C for stated accuracy)				
	Storage: -20 °C to +60 °C.				
Humidity range	Operating: 5% to 80% RH non-condensing Storage: 5% to 95% RH non-condensing.				
Altitude range	Up to 2000 m				
	EN 61010 pollution degree 2: "only nonconductive pollution occurs except that occasionally a temporary conductivity caused				
Pollution degree	by condensation is expected"				
IP rating	IP20				
Safety compliance	Designed to EN 61010-1; LVD compliant				
EMC compliance	Tested to meet EN 61326-1 and FCC Part 15 Subpart B.				
Environmental compliance	RoHS and WEEE				
Warranty	5 years				
Software					
Windows software (32-bit or 64-bit)*	PicoScope 6, PicoLog 6, PicoSDK				
macOS software (64-bit)*	PicoScope 6 Beta (including drivers), PicoLog 6 (including drivers)				
Linux software (64-bit)*	PicoScope 6 Beta software and drivers, PicoLog 6 (including drivers)				
Linux sortware (64-bit)*	See <u>Linux Software and Drivers</u> to install drivers only				
Raspberry Pi 3B and 4B (Raspberry Pi OS)*	PicoLog 6 (including drivers)				
` ` ` ` ` ` ` ` ` ` ` ` ` ` ` ` ` ` ` `	See <u>Linux Software and Drivers</u> to install drivers only				
* See the <u>picotech.com/downloads</u> page for mor	re information.				
Languages supported, PicoScope 6	Chinese (simplified), Chinese (traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Romanian, Russian, Spanish, Swedish, Turkish				
Languages supported, PicoLog 6	Simplified Chinese, English (UK), English (US), French, German, Italian, Japanese, Korean, Russian, Spanish				

PicoScope 4824 inputs and outputs



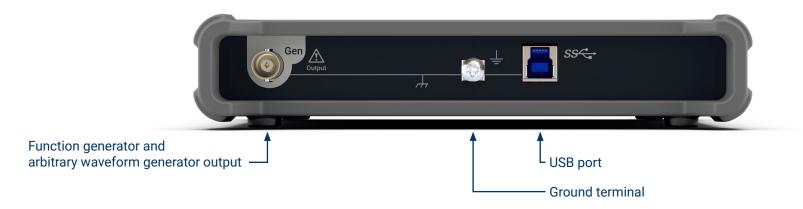

Pack contents

- PicoScope 4824 oscilloscope
- USB 3.0 cable 1.8 m
- · Quick Start Guide
- Carry case









Ordering information

Order cod	Description	USD*	EUR*	GBP*	
PP916	PicoScope 4824 8-channel oscilloscope	2305	1955	1735	
Optional accessories					
TA375	100 MHz 1:1/10:1 passive switchable probe	25	21	17	
TA041	25 MHz 10:1/100:1 active differential probe, ±700 V CAT III	379	319	269	
TA057	25 MHz 20:1/200:1 active differential probe, ±1400 V CAT III	379	319	269	
TA044	70 MHz 100:1/1000:1 differential probe, ±7000 V	919	779	639	
PS008	Optional power supply for TA041 and TA057 probes	25	21	18	
TA167	2000 A AC/DC current clamp	259	219	185	
PP969	Carry case for PicoScope 4824	81	69	56	

Calibration service

Order code	Description	USD*	EUR*	GBP*
CC028	Calibration certificate for the PicoScope 4824 8-channel oscilloscope	129	109	95

^{*} Prices correct at time of publication. Sales taxes not included. Please contact Pico Technology for the latest prices before ordering.

United Kingdom global headquarters

Pico Technology James House Colmworth Business Park

St. Neots Cambridgeshire **PE19 8YP**

United Kingdom

www.picotech.com

+44 (0) 1480 396 395 sales@picotech.com

North America regional office

Pico Technology 320 N Glenwood Blvd

Tyler TX 75702 **United States**

www.picotech.com

+1 800 591 2796

sales@picotech.com

Asia-Pacific regional office

Pico Technology Room 2252, 22/F, Centro 568 Hengfeng Road **Zhabei District** Shanghai 200070 PR China

www.picotech.com

+86 21 2226-5152

pico.asia-pacific@picotech.com

Errors and omissions excepted.

Pico Technology, PicoScope, PicoLog and PicoSDK are internationally registered trademarks of Pico Technology Ltd. LabVIEW is a trademark of National Instruments Corporation. Linux is the registered trademark of Linus Torvalds, registered in the U.S. and other countries. macOS is a trademark of Apple Inc., registered in the U.S. and other countries. MATLAB is a registered trademark of The MathWorks, Inc. Windows is a registered trademark of Microsoft Corporation in the United States and other countries. MM052.en-9 Copyright © 2016 - 2020 Pico Technology Ltd. All rights reserved.

www.picotech.com









