



Multiple Instances of PicoLog recorder

- 1) Go through to "New settings" to configure the first device, then choose to save as a settings file

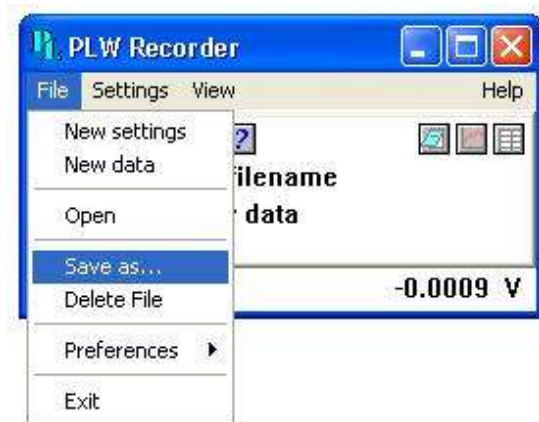


- 2) Save the settings file in, c:\Program Files\Pico Technology\Pico Full\ or another location if desired.

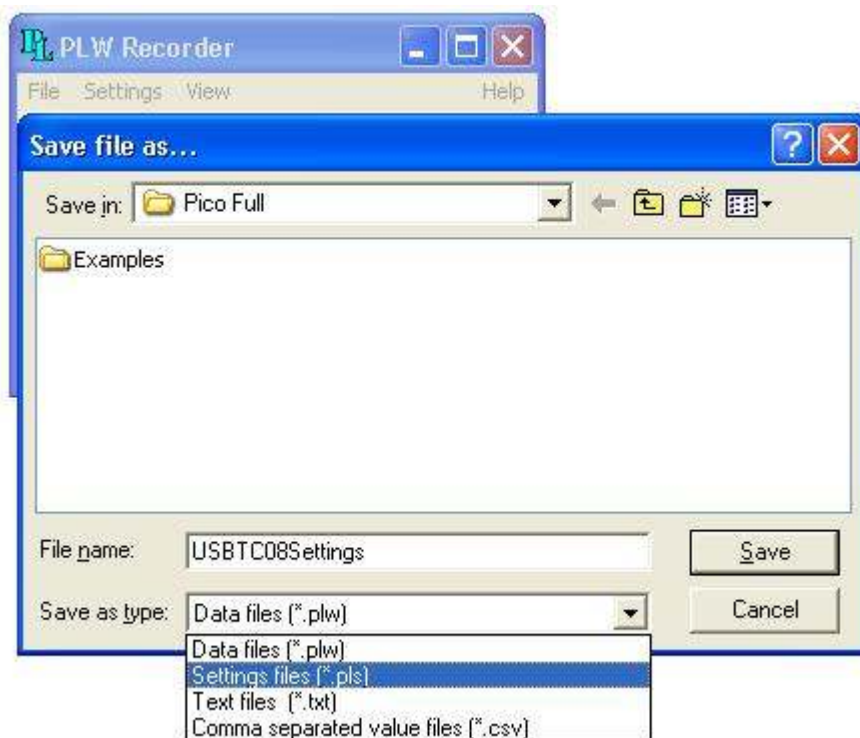

- 3) Repeat steps 1 & 2 for as many instances as needed


4) Create a shortcut to the desktop

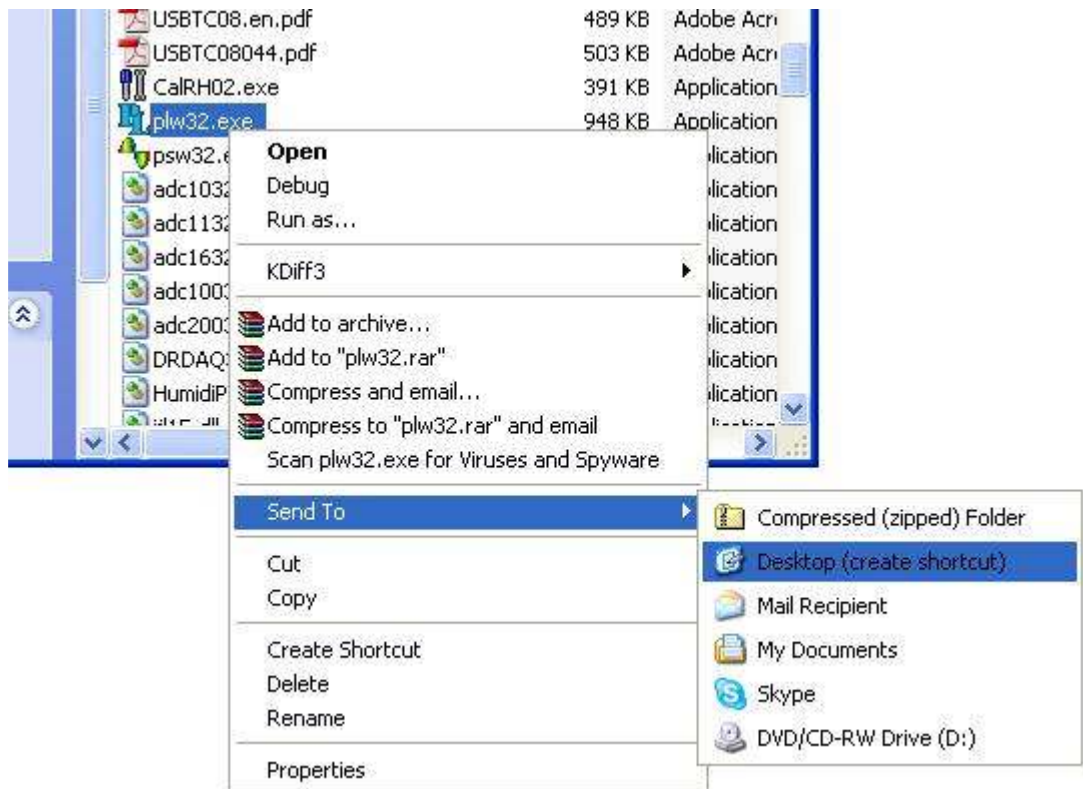


5) Rename the newly created shortcuts to an appropriate name



- 6) Right clicked on the newly renamed shortcut and select properties

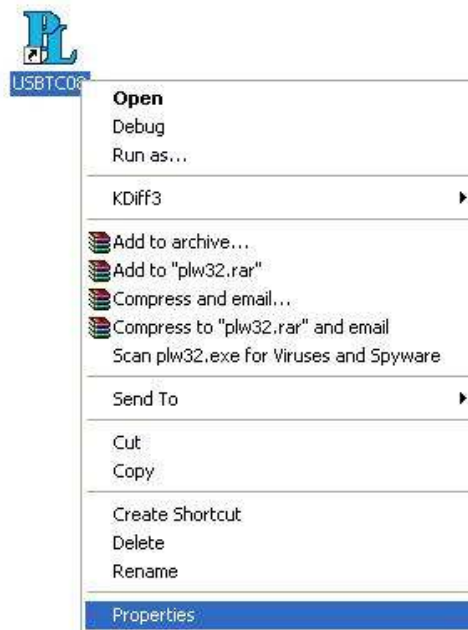

- 7) In the Target box enter the path name of the settings file within double quotes (in this case the path is not required as it lies in the same location as PicoFull folder).

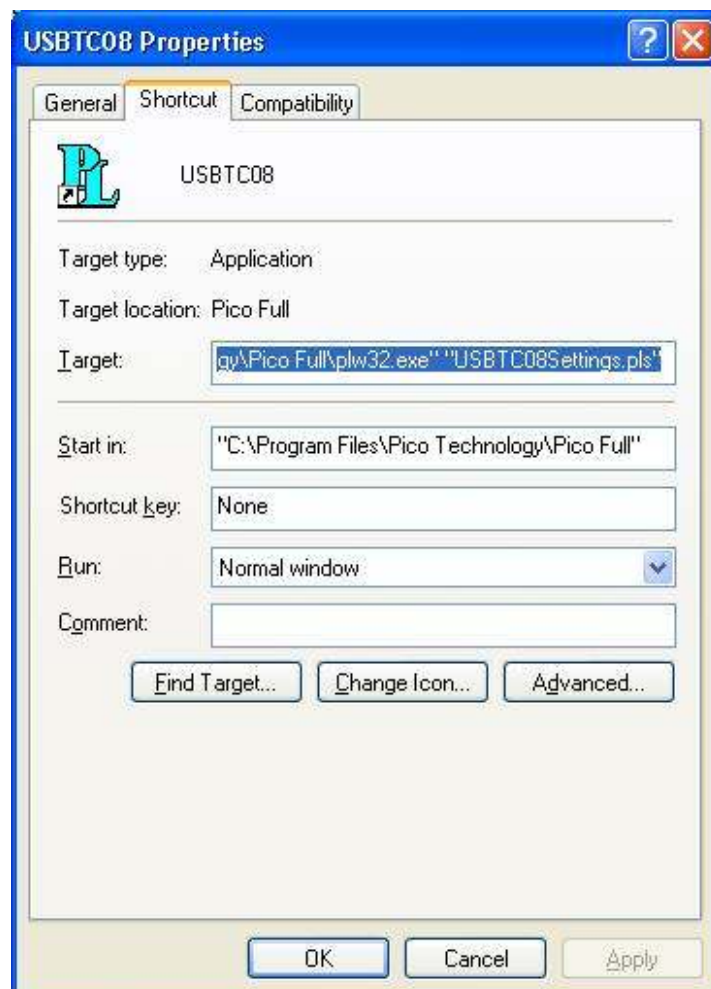

- 8) Repeat steps 6&7 for as many instances created.
- 9) You should now have multiple shortcuts specific to particular units (for demonstrational purposes two devices have been chosen)



- 10) You can now load the instances from the specific shortcuts

